


# NORMAN®


## TROUBLESHOOTING THE BATTERY WAND

To ensure a trouble free experience with the battery wand powered products, it is absolutely necessary to make sure the batteries are loaded in the proper direction, the caps on the battery wand are screwed on tight and not cross threaded and that the push spring is stretched.

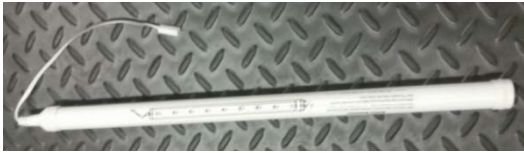

### Factory Battery Wand

The Battery Wand comes assembled from the Factory. Each wand requires 8AA Batteries.

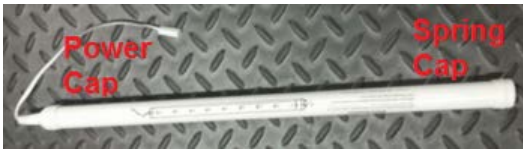

### Power Cap and Wand

Hand tighten the Power Cap, then unscrew and remove the Spring Cap.



### Loading Batteries

Load 8 **NEW** AA batteries into the Wand from the Spring Cap end. Ensure all 8 batteries are loaded correctly, following the diagram on the Wand



### Spring Cap and Spring

Remove the Spring from the Spring Cap and stretch the spring out an additional 1/8". Line up the tabs on the Spring base plate with the slots in the Spring cap and reinsert the Spring into the Spring Cap and screw the Cap back on to the Wand hand tight.



### Assembled and loaded Tube

Put the assembled Wand back into its clips and plug it into the Motor coupling. The Shade should Jog and or Beep.