


## Installation Instructions

Honeycomb Shades  
Motorized Cordless, Motorized Top Down & Motorized Day & Night

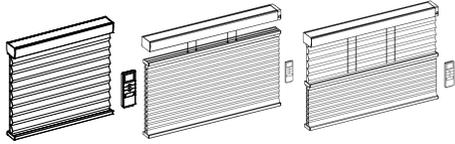

### Getting Started

Remove shade from package. Save packaging until shade is installed and working to your satisfaction.

#### Tools:



- Level
- Measuring Tape
- Pencil
- Power drill (6mm hex driver and drill bit)
- Screwdriver



You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	Screws (Provide)
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide)
Metal	Sheet Metal Screws (Not Provide)

### Check Component/Hardware:

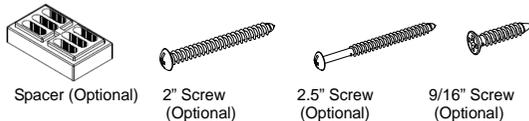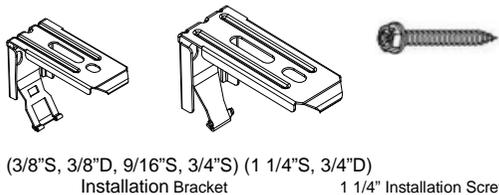

### Hardware Standard Quantity


Order Width (X)	X ≤ 56"	56" < X ≤ 105"	X > 105"
Installation Bracket	2	3	4
1 1/4" Screw (for Installation)	4	6	8

Bracket)			
Spacer Block (Optional)	2	3	4
2" Screw (for Installation Bracket with 1~2pcs spacer block)	4	6	8
2.5" screw (for Installation Bracket with 4pcs spacer block)	4	6	8

**Note: Optional flat head screws included. Use as needed.**


### Step 1: Bracket Installation

- Measure 1 9/16" (40mm) from both ends of the head rail. Mark the bracket location on the mounting surface. Proper alignment of brackets will make installation easier.
- When shade width is less than 24", the distance from both ends of the headrail is 1 3/16" (30mm).

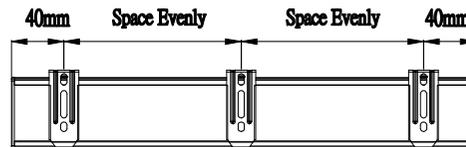


#### Inside Mount

- For 3/8" S, 3/8" D, 9/16" S, 3/4" S, align the front of brackets 1/16" to the edge of window opening as right drawing.

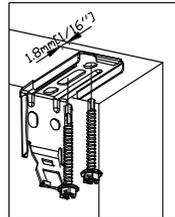


- For 1 1/4" S, 3/4" D, align the front of brackets to the edge of window opening as right drawing.

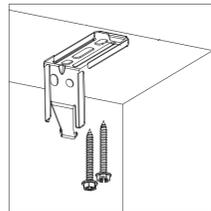


Use two 1 1/4" installation screws to secure brackets. Use wall anchors for drywall or plaster wall.

#### Outside Mount

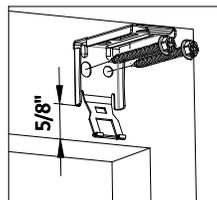

- For 3/8" S, 3/8" D, 9/16" S, 3/4" S, allocate a min. distance of 5/8" from wall to the bottom of brackets as left drawing.

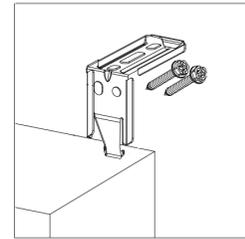


- For 1 1/4" S, 3/4" D, align the end of brackets with the top window frame as left drawing.


• Use two 1 1/4" installation screws to secure brackets. Use wall anchors for drywall or plaster wall.

Note: If spacer block is required, please follow the following guide:

Please always make sure the raised side of the spacer block is against the bracket. Use 2" screws for one or two pcs of spacers, and 2.5" screws for 4 pcs of spacers. See picture below:

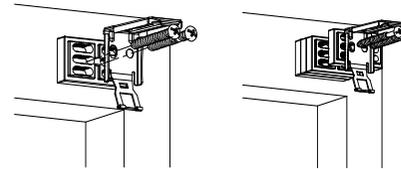


\* For shallow mounting, using flat head screw to secure the bracket in 45°.

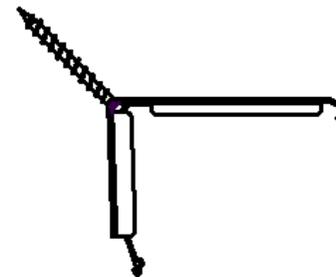


### Step 2: Install Battery Clip (Optional)

The battery clips are attached on the battery wand as below drawing.

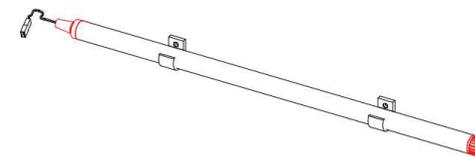


Please remove the clips from the batter wand before you install the clips.

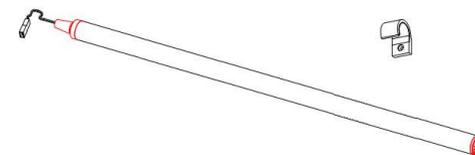

### A: Battery wand behind the head rail


Screw the battery clips into pre-drilled holes on the back of the head rail. Use one 9/16" screw for each clip

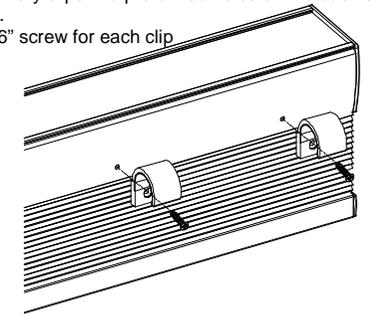

### B: Battery wand outside the window opening


Position the battery clips and make sure the plug for the battery wand and motor can be connected.

Install the battery clips 4 7/16" between as shown below. Use two 9/16" screws to fix the battery clips

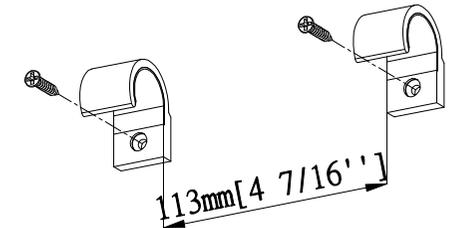

### Install the Battery Wand


Unscrew the end cap of the battery wand and load 8 AA batteries (not provided) according to the sign symbol on the battery wand. Then clip the battery wand to the battery clips.

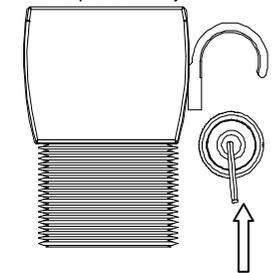


### Step 3: Install the Shade

- Position head rail at an angle so that it is hooked to the front of the bracket. Then push it upward at the back to snap into the bracket.

⚠ For proper installation, start with attaching the front of the headrail to the bracket.

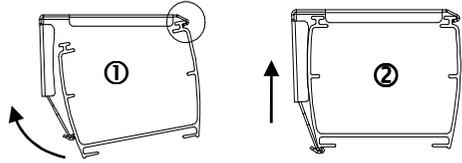

(3/8" S, 3/8" D, 9/16" S, 3/4" S)

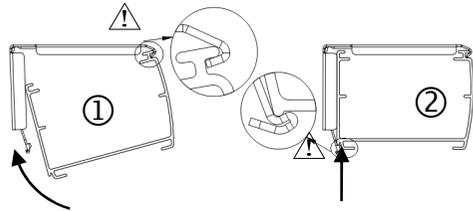


(1 1/4" S, 3/4" D)

#### Step 4: Install Remote Control Holder (Optional)

Position the remote control holder with two 9/16" screws and the distance between screws is 3 1/4" and screws protrude 1/8".

Attach the remote control holder to the screw.

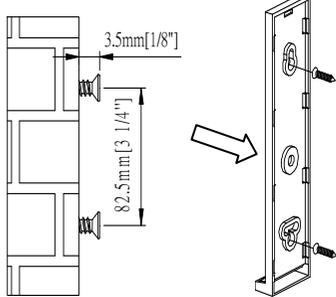


★ Congratulations! You have finished installing the blind.

#### How to Install Hold Down Brackets (optional)


##### A, For Hold Down Bracket.

• Use #6 3/4" screw to secure each bracket.

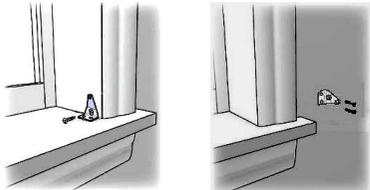


##### B. For Magnetic Hold Down

Use M3x15mm screw to secure the magnet catch at the below location. Make sure the magnet catch align with the pre-installed magnet on shade bottom rail.

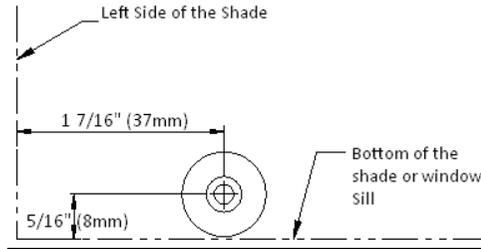

#### ★ Shade Operation


Connect the battery wand or AC/DC adapter to the motor.

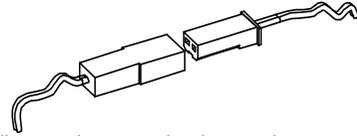


Install remote battery and make sure the screen shows the right channel for the shade, and then the shade can be operable. Please refer to the remote instructions for adjustment.

Note: Channel 1 is the default shown on the remote screen and channel 0 controls all shades programmed in one remote.



\* Original status,

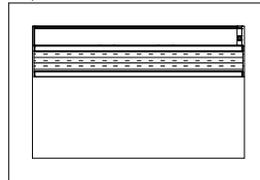


\* Press DOWN, the middle rail & bottom rail will go down together.

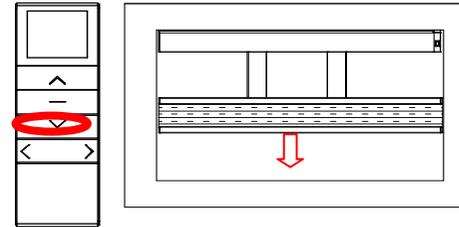


\* When reach the bottom, the bottom rail will stop and the middle will go up.

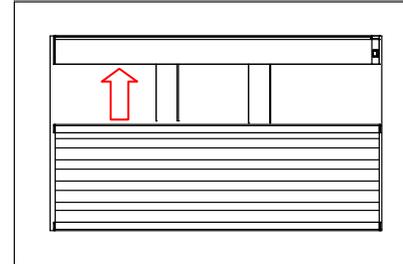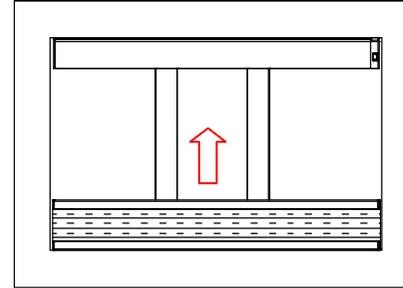



\* When middle rail meet the head rail, it is drop limit.

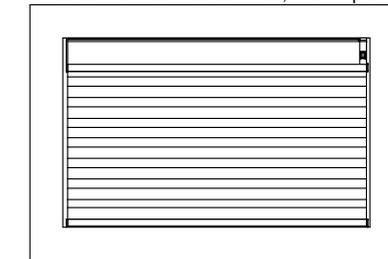


\* Press UP, the middle rail will go down.

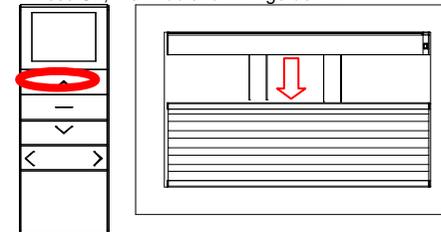


\* When the middle rail reach the bottom, the bottom rail & middle rail will go up together.

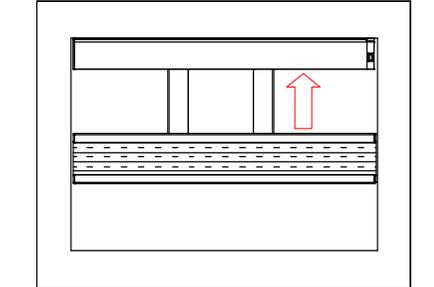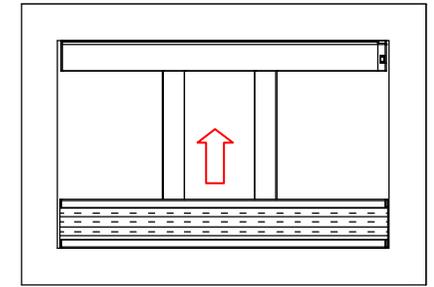

\* When middle rail & bottom rail meet the head rail, it is top limit.

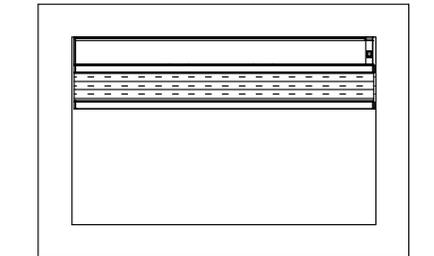


\* When the shade stop at any location, if press STOP 3s, the middle rail will go to the middle of drop length.

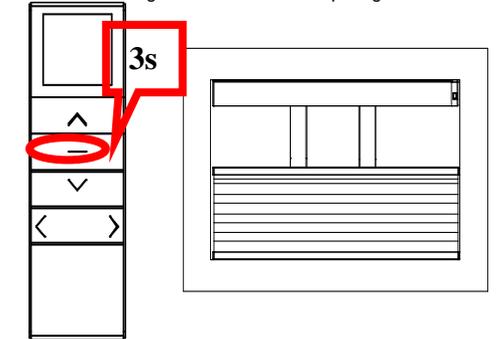


#### ★ Remove the Shade

Fully raise the shade, and then gently pry the bracket off the head rail with a flat screwdriver. Remove the shade.

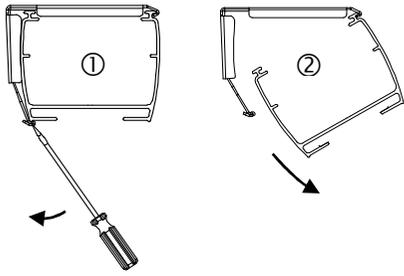

(3/8" S, 3/8" D, 9/16" S, 3/4" S)

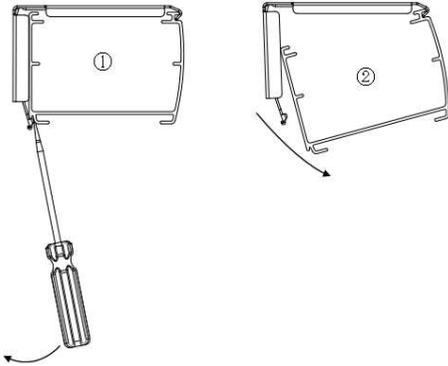

(1 1/4" S, 3/4" D)

Our remotes are pre-programmed and ready to use.  
\*Channel 0 is default.

### ★ Cleaning the Shade


Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).

⚠ Do not spray the liquid to the electric parts of the motorized shade.

### ★ Replacing Batteries

Disengage the battery wand by pulling down it from the battery clip.


Reload new batteries.

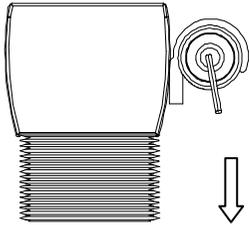

### ★ Manual Control Button

When remote is not available, the shade can be operated by the manual control button.

⚠ Do not press the manual control button over 4secs.

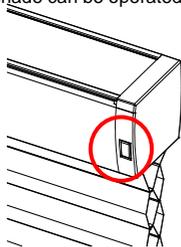

### ★ Note

65101-11750  
N300589