


N300698

65101-11773

Installation Instructions for PVC Light Guard

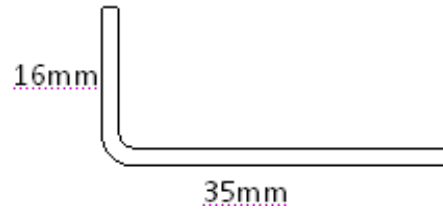

Install PVC Light Guard (optional for IB)

a. The light guard is to be placed at back of the shade on left & right side.

Place the light guard vertically towards the bottom window frame. To avoid scraping, leave at least 2mm gap between fabric stack and light guard. And then mark out the location with a pencil.

Remove the double sided tapes and carefully paste the light guard in position.

Note: *The light guards on both sides are identical;*

Use the double-sided tape on the narrow side of the light guard to attach to the window frame.



b. When light guard exceeds certain length, it will be spliced into 2 pieces. We recommend that the seam be placed as close to the fabric stack as possible, shown in below drawings.

